


El Studio - Spectral Analysis

By Marcelo Rovai in March 2023

Extracting meaningful features from time-series signals. How does Edge Impulse Spectral Block work?

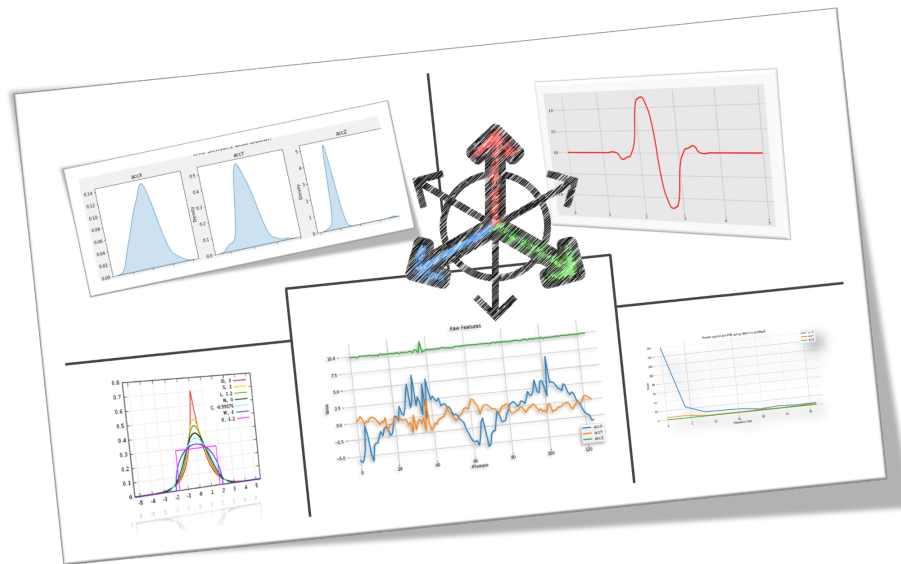

Introduction

I have written several tutorials on Embedded Machine Learning projects in recent years. Among them, I explored a few devices capturing data from accelerometers such as [Sensor DataLogger](#), [TinyML Made Easy: Anomaly Detection & Motion Classification](#), [TinyML Made Easy: Gesture Recognition](#), and [TinyML - Motion Recognition Using Raspberry Pi Pico](#).



What did all those projects have in common? Data come from **accelerometers** and [Edge Impulse Studio](#), a leading development platform for edge-device machine learning. With the Studio, collecting time-series datasets and preprocessing them for input features on a Machine Learning model training was possible.

Data preprocessing is a challenging area for embedded machine learning. Still, Edge Impulse helps overcome this with its digital signal processing (DSP) preprocessing step and, more specifically, the Spectral Features Block for accelerometers.

But how it works under the hood? Let's dig into it.

Extracting Features Review

Extracting features from a dataset captured with accelerometers involves processing and analyzing the raw data. Accelerometers measure the acceleration of an object along one or more axes (typically three, denoted as X, Y, and Z). These measurements can be used to understand various aspects of the object's motion, such as movement patterns and vibrations. Here's a high-level overview of the process:

Data collection: First, we need to gather data from the accelerometers. Depending on the application, data may be collected at different sampling rates. It's essential to ensure that the sampling rate is high enough to capture the relevant dynamics of the studied motion (The sampling rate should be at least double the maximum relevant frequency present in the signal).

Data preprocessing: Raw accelerometer data can be noisy and contain errors or irrelevant information. Preprocessing steps, such as filtering and normalization, can help clean and standardize the data, making it more suitable for feature extraction. The Studio does not perform standardization, so sometimes when working with Sensor Fusion could be necessary to perform this step before uploading data to the Studio. See the great Shawn Hymel's tutorial [Data Curation and Feature Scaling with Edge Impulse](#) to learn more about it.

Segmentation: Depending on the nature of the data and the application, dividing the data into smaller segments or **windows** may be necessary. This can help focus on specific events or activities within the dataset, making feature extraction more manageable and meaningful. The **window size** and overlap (**window increase**) choice depend on the application and the frequency of the events of interest. As a thumb rule, we should try to capture a couple of "cycles of data".

Feature extraction: Once the data is preprocessed and segmented, you can extract features that describe the motion's characteristics. Some typical features extracted from accelerometer data include:


- **Time-domain** features describe the data's statistical properties within each segment, such as mean, median, standard deviation, skewness, kurtosis, and zero-crossing rate.
- **Frequency-domain** features are obtained by transforming the data into the frequency domain using techniques like the Fast Fourier Transform (FFT). Some typical frequency-domain features include the power spectrum, spectral energy, dominant frequencies (amplitude and frequency), and spectral entropy.

- **Time-frequency** domain features combine the time and frequency domain information, such as the Short-Time Fourier Transform (STFT) or the Discrete Wavelet Transform (DWT). They can provide a more detailed understanding of how the signal's frequency content changes over time.

In many cases, the number of extracted features can be quite large, which may lead to overfitting or increased computational complexity. Feature selection techniques, such as mutual information, correlation-based methods, or principal component analysis (PCA), can help identify the most relevant features for a given application and reduce the dimensionality of the dataset. The Studio can help with such feature importance calculations.

Let's explore one of my TinyML Motion Classification projects in more detail.


A TinyML Motion Classification project

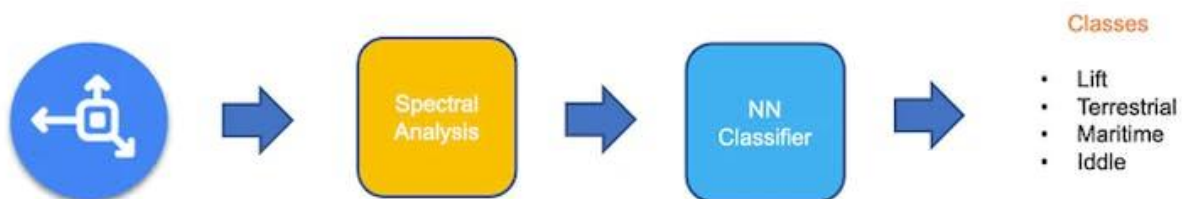


For this [tutorial](#), we simulated mechanical stresses in transport, where our problem was to classify four classes of movement:

- **Maritime** (pallets in boats)
- **Terrestrial** (pallets in a Truck or Train)
- **Lift** (Palettes being handled by Fork-Lift)
- **Idle** (Palettes in Storage houses)


The accelerometers provided the data on the palette (or container):

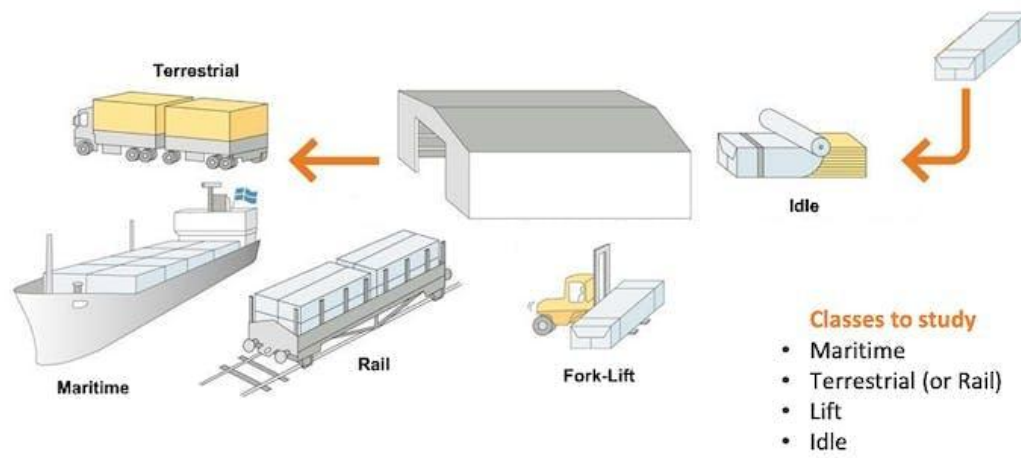

We will simulate the container movements during transportation by hand:

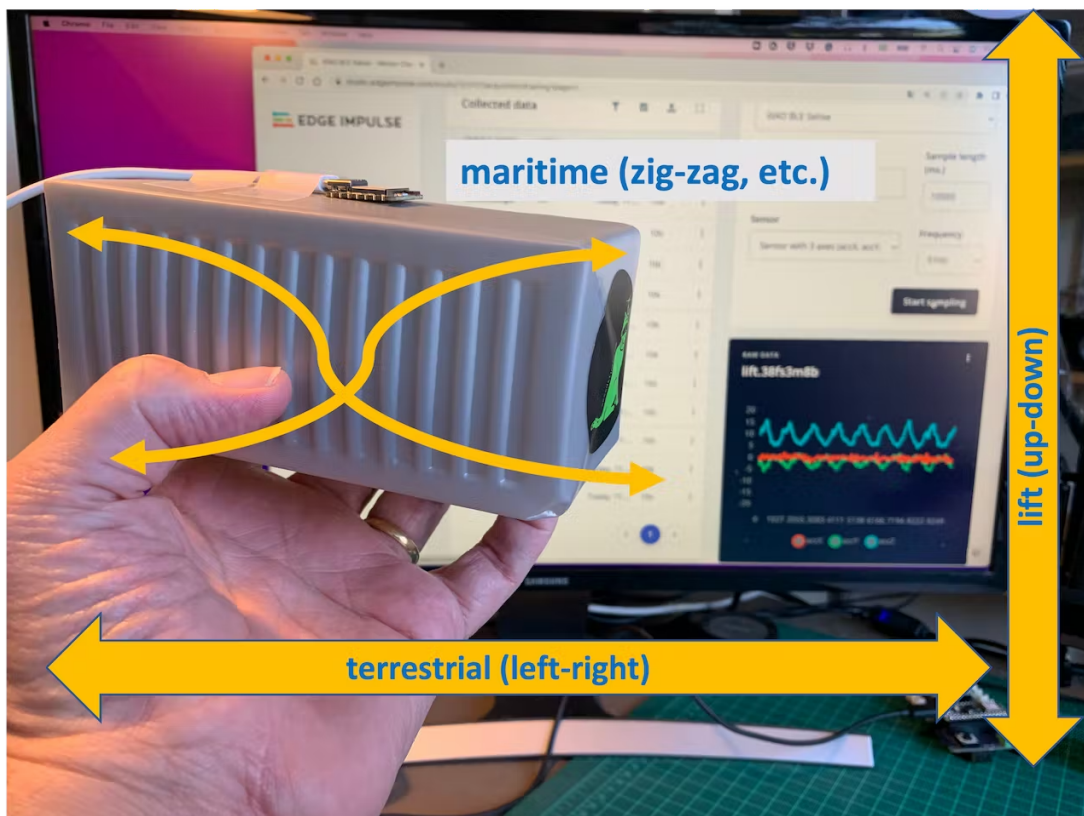


Below is one sample (raw data) of 10 seconds, captured with a sampling frequency of 62.5Hz:

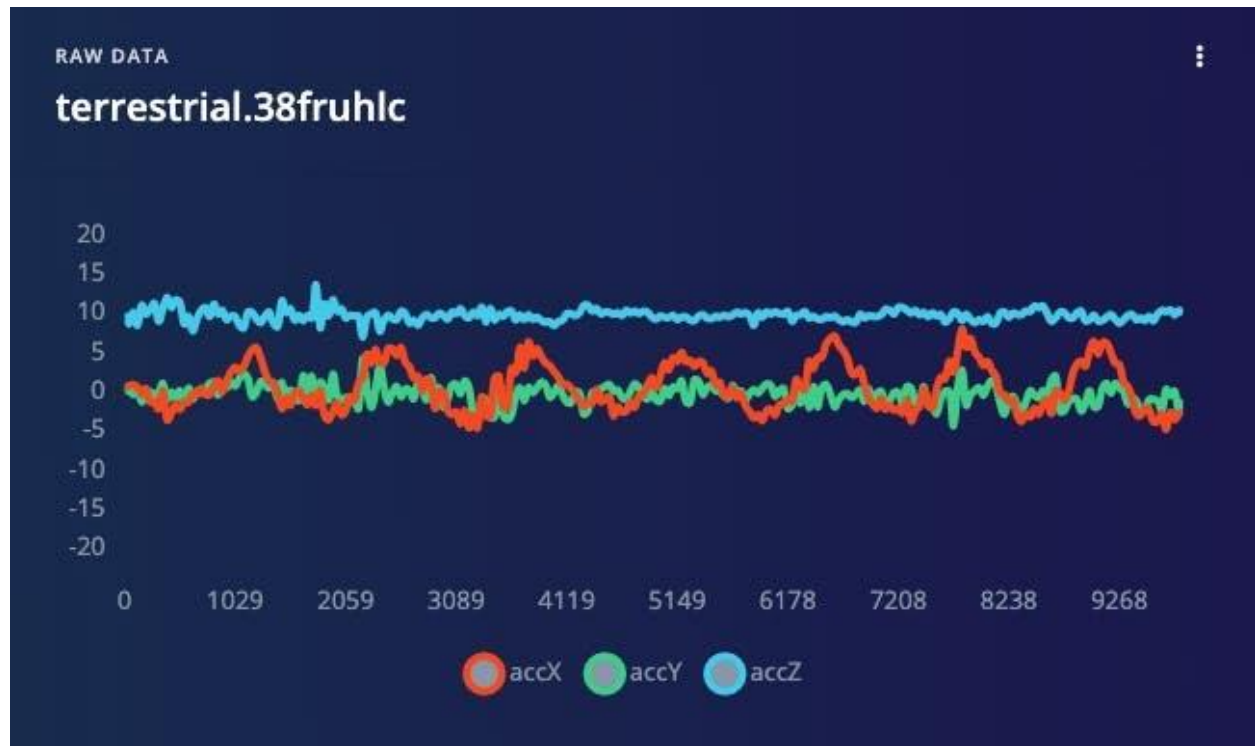


Data Pre-Processing

As discussed in the last section, the raw data captured by the accelerometer (a "time series" data) should be converted to "tabular data", using one of the typical Feature Extraction methods described.

We should segment the data using a sliding window over the sample data for feature extraction. The project captured every 10 seconds of accelerometer data with a sample rate of 62.5 Hz. A 2 seconds window captured 375 data points (3 axis x 2 seconds x 62.5 samples). The window was slid each 80ms, creating a larger dataset where each instance has 375 "raw features."

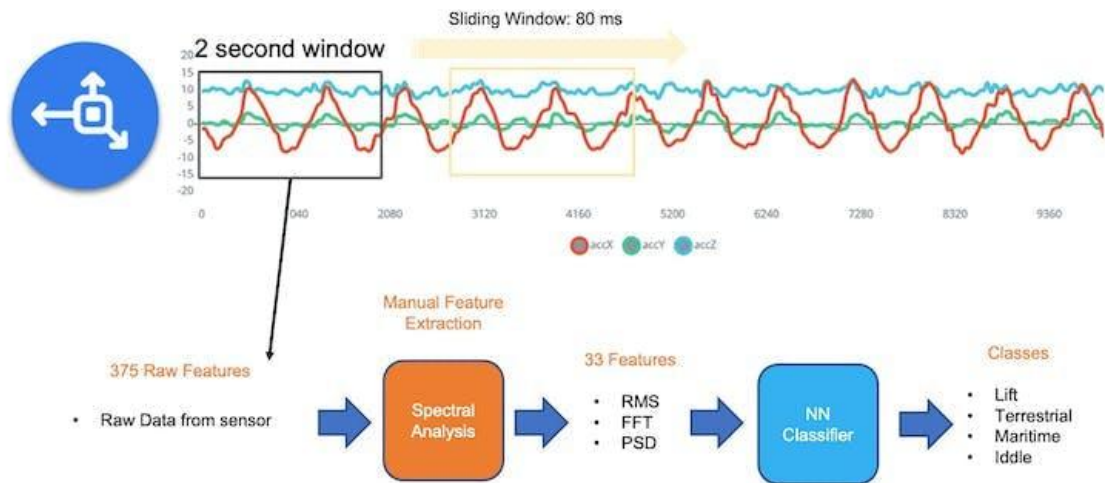

On the Studio, the previous version (V1) of the **Spectral Analysis Block** extracted as time-domain features only the RMS. For the frequency domain, the peaks and frequency (using FFT), and the power characteristics (PSD) of the signal over time resulted in a fixed tabular dataset of 33 features (11 per each axe),

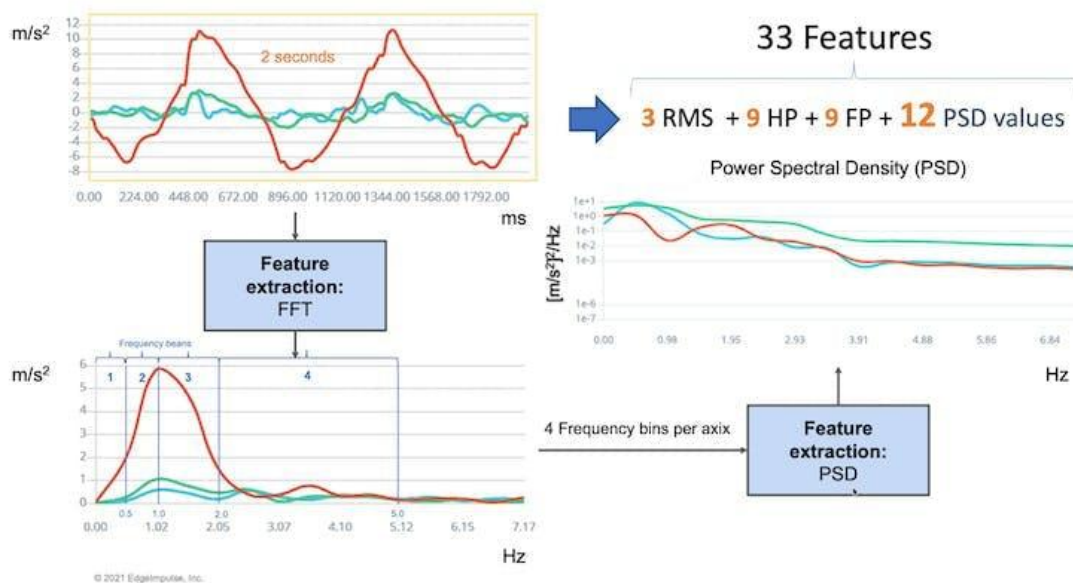

Those 33 features were the Input tensor of a Neural Network Classifier.

In 2022, Edge Impulse released version 2 of the Spectral Analysis block, which we will explore here.

El Studio - Spectral Analysis Block V.2 under the hood

In Version 2, Time Domain Statistical features per axis/channel are:

- RMS
- Skewness
- Kurtosis

And the Frequency Domain Spectral features per axis/channel are:

- Spectral Power
- Skewness (in a next version)
- Kurtosis (in a next version)

In this [link](#), we can have more details about the feature extraction.

You can follow the explanation, playing with the code using my [Google CoLab Notebook: Edge Impulse Spectral Analysis Block Notebook](#).

Clone the public project: <https://studio.edgeimpulse.com/public/198358/latest>

Start importing the libraries:

```
import numpy as np
import matplotlib.pyplot as plt
import seaborn as sns
import math
from scipy.stats import skew, kurtosis
from scipy import signal
from scipy.signal import welch
```



```
from scipy.stats import entropy
from sklearn import preprocessing
import pywt


plt.rcParams['figure.figsize'] = (12, 6)
plt.rcParams['lines.linewidth'] = 3
```

From the studied project, let's choose a data sample from accelerometers as below:

- Window: 2 seconds (2,000 ms):
- Sample frequency: 62.5Hz)
- We will select `None` filter and,
- FFT length: `16`.

```
f = 62.5 # Hertz
wind_sec = 2 # seconds
FFT_Lenght = 16
axis = ['accX', 'accY', 'accZ']
n_sensors = len(axis)
```

Selecting the *Raw Features* on the Studio Spectral Analysis tab, we can copy all 375 data points of a particular 2 seconds window to the clipboard.

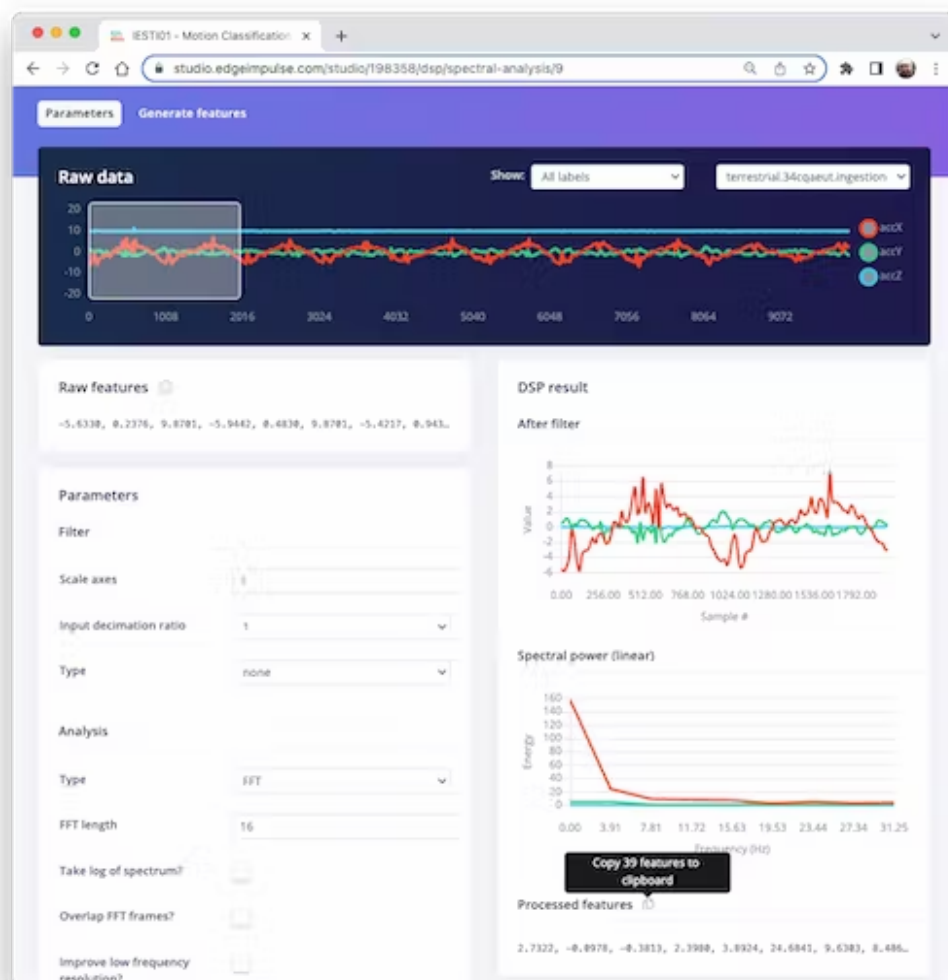

Paste the data points to a new variable *data*:

```
data=[-5.6330, 0.2376, 9.8701, -5.9442, 0.4830, 9.8701, -5.4217, ...]  
No_raw_features = len(data)  
N = int(No_raw_features/n_sensors)
```

The total raw features are 375, but we will work with each axis individually, where $N = 125$ (number of samples per axis).

We aim to understand how Edge Impulse gets the processed features at the end.



So, you should also past the processed features on a variable (to compare the calculated features in Python with the ones provided by the Studio) :

```
features = [2.7322, -0.0978, -0.3813, 2.3980, 3.8924, 24.6841, 9.6303, ...]  
N_feat = len(features)  
N_feat_axis = int(N_feat/n_sensors)
```

The total number of processed features is 39, which means 13 features/axis.

Looking at those 13 features closely, we will find 3 for the time domain (RMS, Skewness, and Kurtosis):

- [rms] [skew] [kurtosis]


leaving 10 for the frequency domain (we will return to this later).

- [spectral skew][spectral kurtosis][Spectral Power 1] ...
[Spectral Power 8]

Splitting raw data per sensor

The `data` has samples from all axis; let's split and plot them separately:

```
def plot_data(sensors, axis, title):  
    [plt.plot(x, label=y) for x,y in zip(sensors, axis)]  
    plt.legend(loc='lower right')  
    plt.title(title)  
    plt.xlabel('#Sample')  
    plt.ylabel('Value')  
    plt.box(False)  
    plt.grid()  
    plt.show()  
  
accX = data[0::3]  
accY = data[1::3]  
accZ = data[2::3]  
sensors = [accX, accY, accZ]  
plot_data(sensors, axis, 'Raw Features')
```

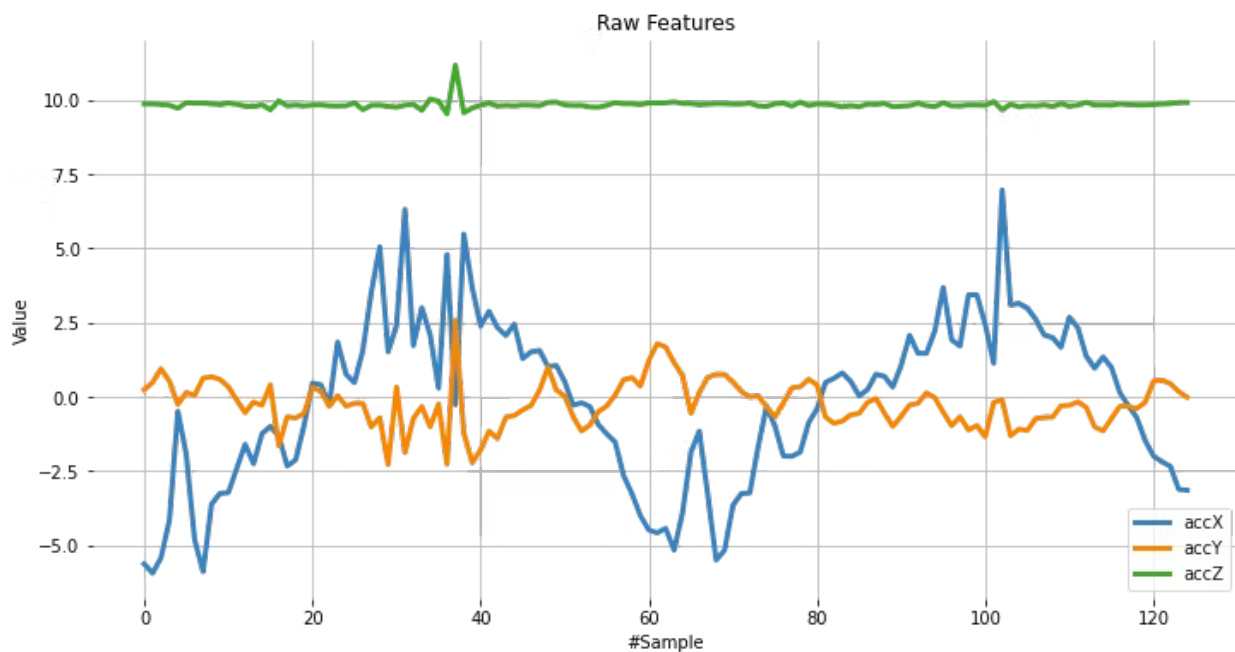

Subtracting the mean

Next, we should subtract the mean from the *data*. Subtracting the mean from a data set is a common data pre-processing step in statistics and machine learning. The purpose of subtracting the mean from the data is to center the data around zero. This is important because it can reveal patterns and relationships that might be hidden if the data is not centered.

Here are some specific reasons why subtracting the mean can be useful:

- It simplifies analysis: By centering the data, the mean becomes zero, making some calculations simpler and easier to interpret.
- It removes bias: If the data is biased, subtracting the mean can remove it and allow for a more accurate analysis.
- It can reveal patterns: Centering the data can help uncover patterns that might be hidden if the data is not centered. For example, centering the data can help you identify trends over time if you analyze a time series dataset.
- It can improve performance: In some machine learning algorithms, centering the data can improve performance by reducing the influence of outliers and making the data more easily comparable. Overall, subtracting the mean is a simple but powerful technique that can be used to improve the analysis and interpretation of data.

```
dtmean = [(sum(x)/len(x)) for x in sensors]
[print('mean_'+x+'= ', round(y, 4)) for x,y in zip(axis, dtmean)][0]

accX = [(x - dtmean[0]) for x in accX]
accY = [(x - dtmean[1]) for x in accY]
accZ = [(x - dtmean[2]) for x in accZ]
sensors = [accX, accY, accZ]

plot_data(sensors, axis, 'Raw Features - Subtract the Mean')
```



RMS Calculation

The RMS value of a set of values (or a continuous-time waveform) is the square root of the arithmetic mean of the squares of the values or the square of the function that defines the continuous waveform. In physics, the RMS current value can also be defined as the "value of the direct current that dissipates the same power in a resistor."

In the case of a set of n values $\{x_1, x_2, \dots, x_n\}$, the RMS is:

$$x_{\text{RMS}} = \sqrt{\frac{1}{n} (x_1^2 + x_2^2 + \dots + x_n^2)} .$$

NOTE that the RMS value is different for the original raw data and after subtracting the mean

```
# Using numpy and standartized data (subtracting mean)
rms = [np.sqrt(np.mean(np.square(x))) for x in sensors]
```

We can compare the calculated RMS values here with the ones presented by Edge Impulse:

```
[print('rms_'+x+'= ', round(y, 4)) for x,y in zip(axis, rms)][0]  
print("\nCompare with Edge Impulse result features")  
print(features[0:N_feat:N_feat_axis])
```

```
rms_accX= 2.7322
```

```
rms_accY= 0.7833
```

```
rms_accZ= 0.1383
```

Compared with Edge Impulse result features:


```
[2.7322, 0.7833, 0.1383]
```

Skewness and kurtosis calculation


In statistics, skewness, and kurtosis are two ways to measure the **shape of a distribution**.

Here we can see the sensors values distribution:

```
fig, axes = plt.subplots(nrows=1, ncols=3, figsize=(13, 4))  
sns.kdeplot(accX, fill=True, ax=axes[0])  
sns.kdeplot(accY, fill=True, ax=axes[1])  
sns.kdeplot(accZ, fill=True, ax=axes[2])  
axes[0].set_title('accX')  
axes[1].set_title('accY')  
axes[2].set_title('accZ')  
plt.suptitle('IMU Sensors distribution', fontsize=16, y=1.02)  
plt.show()
```

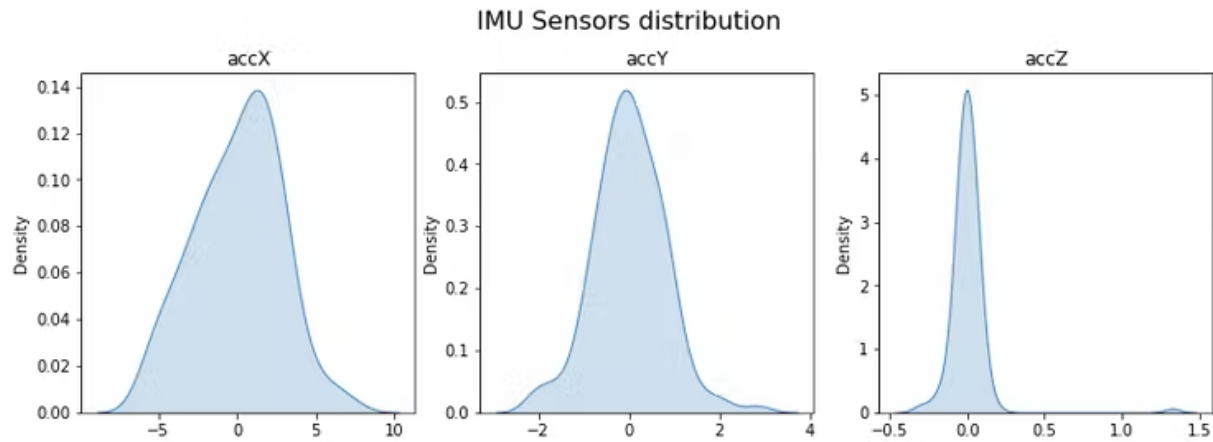Skewness is a measure of the asymmetry of a distribution. This value can be positive or negative.

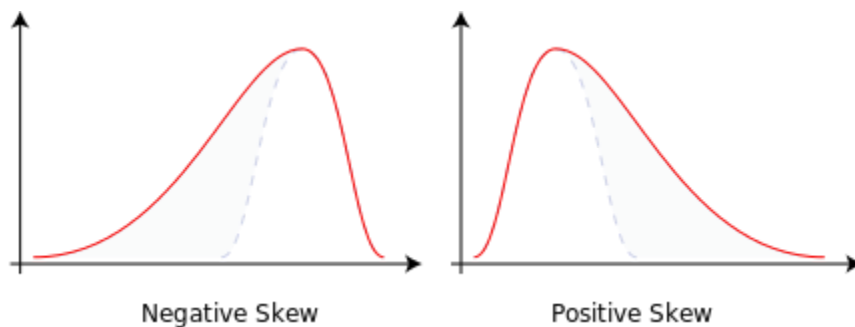

- A negative skew indicates that the tail is on the left side of the distribution, which extends towards more negative values.
- A positive skew indicates that the tail is on the right side of the distribution, which extends towards more positive values.
- A zero value indicates no skewness in the distribution at all, meaning the distribution is perfectly symmetrical.

```
skew = [skew(x, bias=False) for x in sensors]
[print('skew_'+x+'= ', round(y, 4)) for x,y in zip(axis, skew)][0]
print("\nCompare with Edge Impulse result features")
features[1:N_feat:N_feat_axis]
```

```
skew_accX= -0.099
```


```
skew_accY= 0.1756
```

```
skew_accZ= 6.9463
```

Compared with Edge Impulse result features:

```
[-0.0978, 0.1735, 6.8629]
```

Kurtosis is a measure of whether or not a distribution is a heavy-tailed or light-tailed relative to a normal distribution.

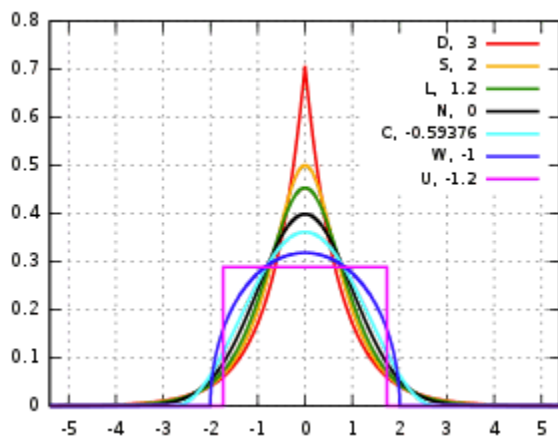

- The kurtosis of a normal distribution is zero.
- If a given distribution with a negative kurtosis, it is said to be platykurtic, which means it tends to produce fewer and less extreme outliers than the normal distribution.
- If a given distribution has a kurtosis positive, it is said to be leptokurtic, which means it tends to produce more outliers than the normal distribution.

```
kurt = [kurtosis(x, bias=False) for x in sensors]
[print('kurt_'+x+'= ', round(y, 4)) for x,y in zip(axis, kurt)][0]
print("\nCompare with Edge Impulse result features")
features[2:N_feat:N_feat_axis]
```

```
kurt_accX= -0.3475
```

```
kurt_accY= 1.2673
```

```
kurt_accZ= 68.1123
```

Compared with Edge Impulse result features:

```
[-0.3813, 1.1696, 65.3726]
```

Spectral features

The filtered signal is passed to the Spectral power section, which computes the **FFT** to generate the spectral features.

Once the sampled window usually is larger than the FFT size, the window will be broken into frames (or "sub-windows"), and the FFT is calculated from each frame.

FFT length - The FFT size. This determines the number of FFT bins and the resolution of frequency peaks that you can separate. A lower number means more signals will average together in the same FFT bin, but it also reduces the number of features and model size. A higher number will separate more signals into separate bins, generating a larger model.

- The total number of Spectral Power features will change depending on how you set the filter and FFT parameters. With No filtering, the number of features is 1/2 of the FFT Length.

Spectral Power - Welch's method

We should use [Welch's method](#) to split the signal on the frequency domain in bins and calculate the power spectrum for each bin. This method divides the signal into overlapping segments, applies a window function to each segment,

computes the periodogram of each segment using DFT, and averages them to obtain a smoother estimate of the power spectrum.


```
# Function used by Edge Impulse instead scipy.signal.welch().
def welch_max_hold(fx, sampling_freq, nfft, n_overlap):
    n_overlap = int(n_overlap)
    spec_powers = [0 for _ in range(nfft//2+1)]
    ix = 0
    while ix <= len(fx):
        # Slicing truncates if end_idx > len, and rfft will auto zero pad
        fft_out = np.abs(np.fft.rfft(fx[ix:ix+nfft], nfft))
        spec_powers = np.maximum(spec_powers, fft_out**2/nfft)
        ix = ix + (nfft-n_overlap)
    return np.fft.rfftfreq(nfft, 1/sampling_freq), spec_powers
```

Applying the above function to 3 signals:

```
fax,Pax = welch_max_hold(accX, fs, FFT_Lenght, 0)
fay,Pay = welch_max_hold(accY, fs, FFT_Lenght, 0)
faz,Paz = welch_max_hold(accZ, fs, FFT_Lenght, 0)
specs = [Pax, Pay, Paz ]
```

We can plot the Power Spectrum $P(f)$:

```
plt.plot(fax,Pax, label='accX')
plt.plot(fay,Pay, label='accY')
plt.plot(faz,Paz, label='accZ')
plt.legend(loc='upper right')
plt.xlabel('Frequency (Hz)')
#plt.ylabel('PSD [V**2/Hz]')
plt.ylabel('Power')
plt.title('Power spectrum P(f) using Welch\'s method')
plt.grid()
plt.box(False)
plt.show()
```

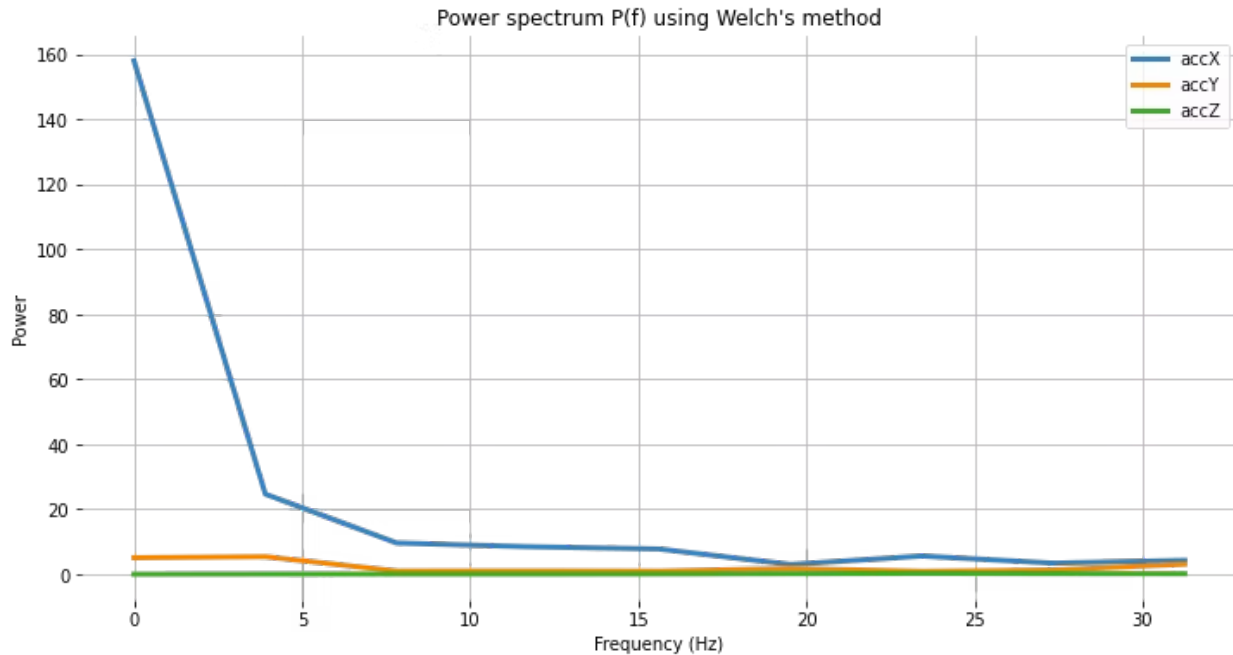

Besides the Power Spectrum, we can also include the skewness and kurtosis of the features in the frequency domain (should be available on a new version):

```
spec_skew = [skew(x, bias=False) for x in specs]
spec_kurtosis = [kurtosis(x, bias=False) for x in specs]
```

Let's now list all Spectral features per axis and compare them with EI:

```
print("EI Processed Spectral features (accX): ")
print(features[3:N_feat_axis][0:])
print("\nCalculated features:")
print (round(spec_skew[0],4))
print (round(spec_kurtosis[0],4))
[print(round(x, 4)) for x in Pax[1:]][0]
```

EI Processed Spectral features (accX):

```
2.398, 3.8924, 24.6841, 9.6303, 8.4867, 7.7793, 2.9963, 5.6242,
3.4198, 4.2735
```

Calculated features:

```
2.9069 8.5569 24.6844 9.6304 8.4865 7.7794 2.9964 5.6242 3.4198
4.2736
```

```
print("EI Processed Spectral features (accY): ")
print(features[16:26][0:]) #13: 3+N_feat_axis; 26 = 2x N_feat_axis
print("\nCalculated features:")
print (round(spec_skew[1],4))
print (round(spec_kurtosis[1],4))
[print(round(x, 4)) for x in Pay[1:]][0]
```

EI Processed Spectral features (accY):

```
0.9426, -0.8039, 5.429, 0.999, 1.0315, 0.9459, 1.8117, 0.9088,
1.3302, 3.112
```

Calculated features:

```
1.1426 -0.3886 5.4289 0.999 1.0315 0.9458 1.8116 0.9088 1.3301
3.1121
```

```
print("EI Processed Spectral features (accZ): ")
print(features[29:][0:]) #29: 3+(2*N_feat_axis);
print("\nCalculated features:")
print (round(spec_skew[2],4))
print (round(spec_kurtosis[2],4))
[print(round(x, 4)) for x in Paz[1:]][0]
```

EI Processed Spectral features (accZ):

```
0.3117, -1.3812, 0.0606, 0.057, 0.0567, 0.0976, 0.194, 0.2574,
0.2083, 0.166
```

Calculated features:

```
0.3781 -1.4874 0.0606 0.057 0.0567 0.0976 0.194 0.2574 0.2083
0.166
```

Time-frequency domain

Edge Impulse should soon release another powerful tool for Feature Extraction, **Wavelets**.

When this tutorial was written, for *Developer's account*, the Wavelet option was not available at the start, but only when one of the EON Tuner's resultant optimal architecture is selected.

Wavelets

Wavelet is a powerful technique for analyzing signals with transient features or abrupt changes, such as spikes or edges, which are difficult to interpret with traditional Fourier-based methods.


Wavelet transforms work by breaking down a signal into different frequency components and analyzing them individually. The transformation is achieved by convolving the signal with a **wavelet function**, a small waveform centered at a specific time and frequency. This process effectively decomposes the signal into different frequency bands, each of which can be analyzed separately.

One of the key benefits of wavelet transforms is that they allow for time-frequency analysis, which means that they can reveal the frequency content of a signal as it changes over time. This makes them particularly useful for analyzing non-stationary signals, which vary over time.

Wavelets have many practical applications, including signal and image compression, denoising, feature extraction, and image processing.

Let's select Wavelet on the Spectral Features block in the same project:


- Type: Wavelet
- Wavelet Decomposition Level: 1
- Wavelet: bior1.3

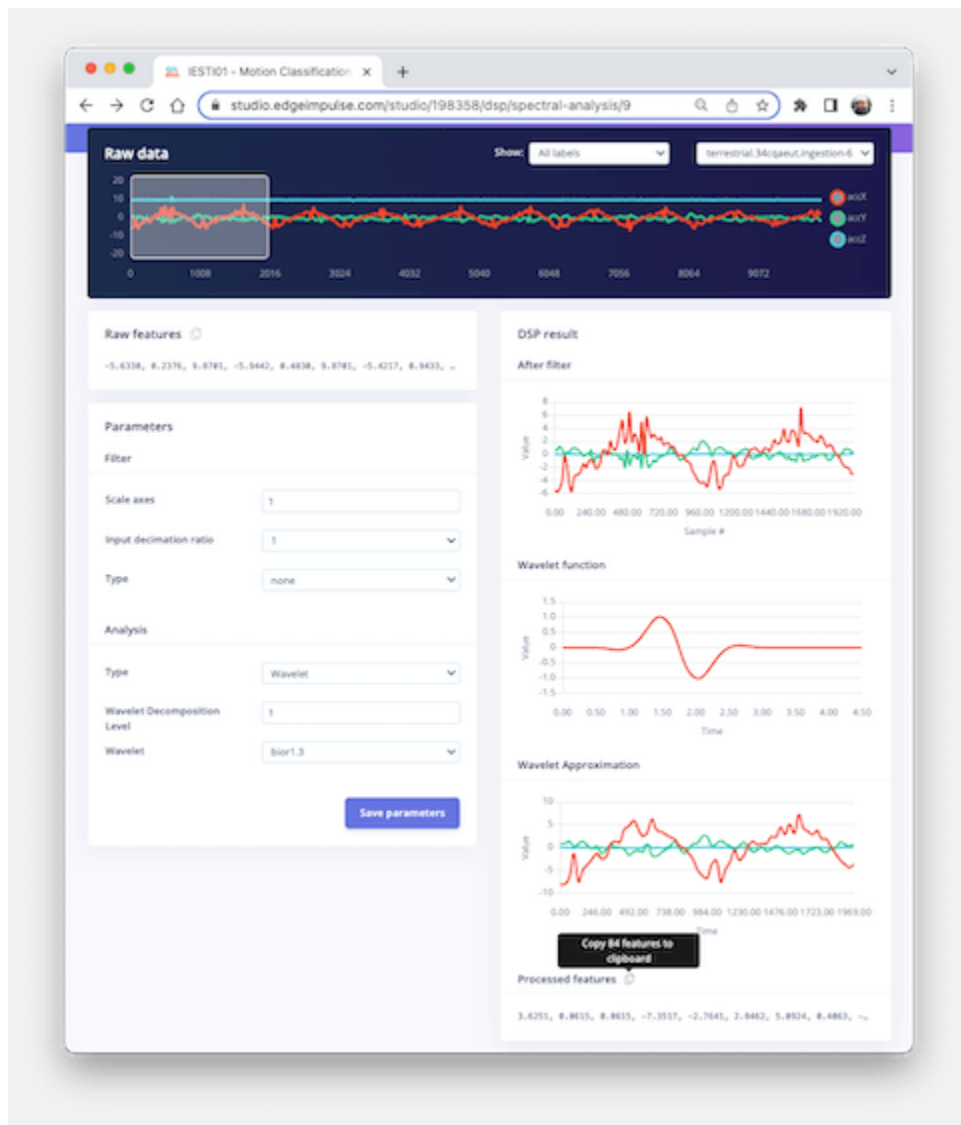

The Wavelet Function

```
wavelet_name='bior1.3'
num_layer = 1

wavelet = pywt.Wavelet(wavelet_name)
[phi_d,psi_d,phi_r,psi_r,x] = wavelet.wavefun(level=5)
plt.plot(x, psi_d, color='red')
plt.title('Wavelet Function')
plt.ylabel('Value')
plt.xlabel('Time')
plt.grid()
plt.box(False)
plt.show()
```

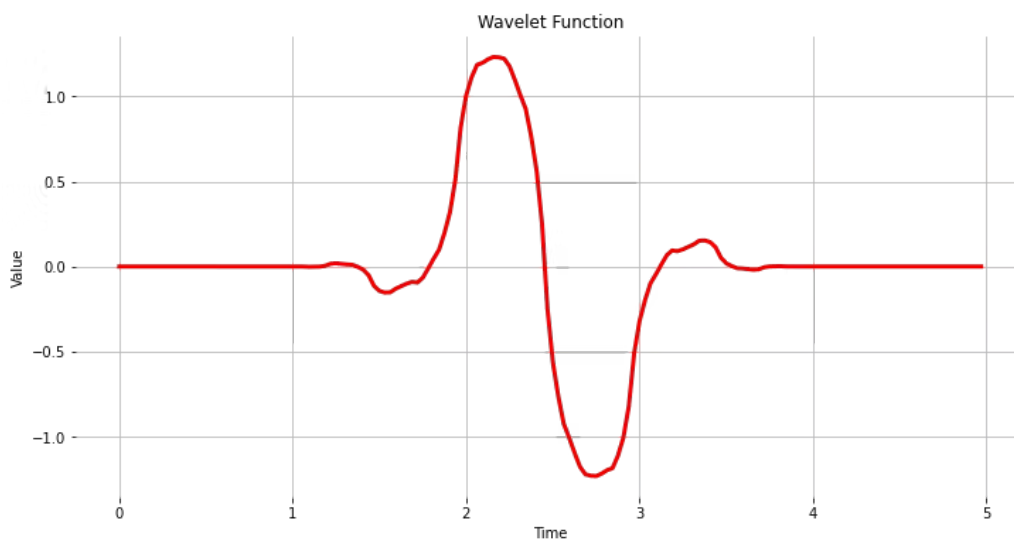

Same as we did before, let's copy and past the Processed Features:

Copy 84 features to clipboard

Time

Processed features

Copy to clipboard

3.6251, 0.0615, 0.0615, -7.3517, -2.7641, 2.8462, 5.0924, 0.4063, -0.2133, 3.8473, 15.032...

```
features = [3.6251, 0.0615, 0.0615, -7.3517, -2.7641, 2.8462, 5.0924, ...]
N_feat = len(features)
N_feat_axis = int(N_feat/n_sensors)
```

Edge Impulse computes the [Discrete Wavelet Transform \(DWT\)](#) for each one of the Wavelet Decomposition levels selected. After that, the features will be extracted.

In the case of **Wavelets**, the extracted features are *basic statistical values*, *crossing values*, and *entropy*. There are, in total, 14 features per layer as below:

- `[11] Features`: **n5, n25, n75, n95, mean, median**, standard deviation (**std**), variance (**var**) and root mean square (**rms**), **kurtosis**, and skewness (**skew**) are calculated.
- `[2] Features`: Zero crossing rate (**zcross**) and mean crossing rate (**mcross**) are the times that the signal passes through the baseline ($y = 0$) and the average level ($y = u$) per unit of time, respectively
- `[1] Feature`: **Entropy** features are a characteristic measure of signal complexity

All above 14 values are calculated for each Layer (including L0, the original signal)

- The total number of features varies depending on how you set the filter and the number of layers. For example, with `[None]` filtering and Level `[1]`, the number of features per axis will be 14×2 (L0 and L1) = 28. For the three axes, we will have a total of 84 features.


Wavelet Analysis

Wavelet analysis decomposes the signal (**accX**, **accY**, and **accZ**) into different frequency components using a set of filters applied to the signal, which separates these components into low-frequency (slowly varying parts of the signal containing long-term patterns), here **accX_l1**, **accY_l1**, **accZ_l1** and, high-frequency (rapidly varying parts of the signal containing short-term patterns) components, here **accX_d1**, **accY_d1**, **accZ_d1**, allowing for the extraction of features for further analysis or classification.

Only the low-frequency components (approximation coefficients, or cA) will be used. In this example, we assume only one level (Single level Discrete Wavelet Transform), where the function will return a tuple. With a multilevel decomposition, the "Multilevel 1D Discrete Wavelet Transform", the result will be a list (for detail, please see: [Discrete Wavelet Transform \(DWT\)](#))

```
(accX_l1, accX_d1) = pywt.dwt(accX, wavelet_name)
(accY_l1, accY_d1) = pywt.dwt(accY, wavelet_name)
(accZ_l1, accZ_d1) = pywt.dwt(accZ, wavelet_name)
sensors_l1 = [accX_l1, accY_l1, accZ_l1]
```

```
# Plot power spectrum versus frequency
plt.plot(accX_l1, label='accX')
plt.plot(accY_l1, label='accY')
plt.plot(accZ_l1, label='accZ')
plt.legend(loc='lower right')
plt.xlabel('Time')
plt.ylabel('Value')
plt.title('Wavelet Approximation')
plt.grid()
plt.box(False)
plt.show()
```

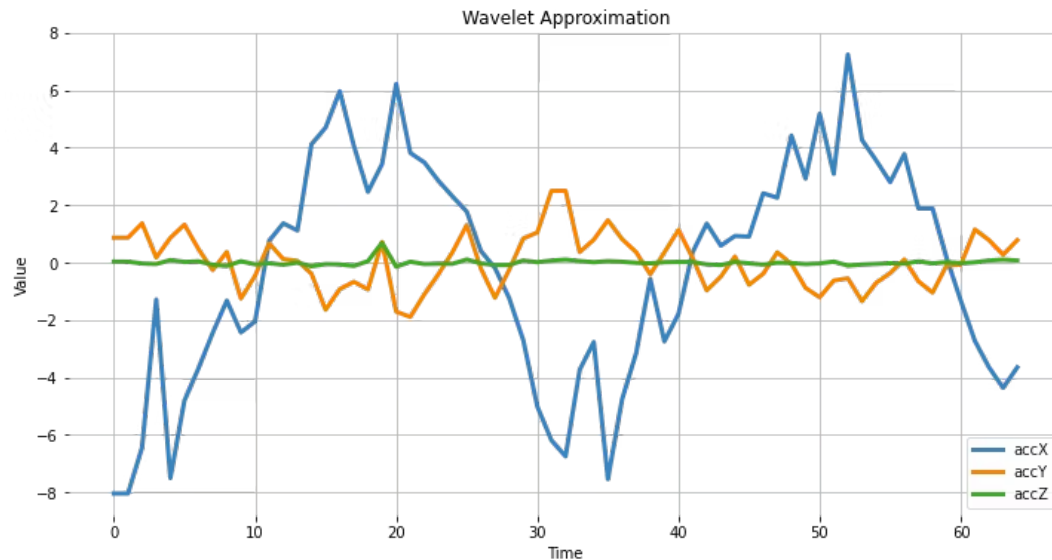

Feature Extraction

Let's start with the basic statistical features. Note that we apply the function for both the original signals and the resultant cAs from the DWT:

```
def calculate_statistics(signal):
    n5 = np.percentile(signal, 5)
    n25 = np.percentile(signal, 25)
    n75 = np.percentile(signal, 75)
    n95 = np.percentile(signal, 95)
    median = np.percentile(signal, 50)
    mean = np.mean(signal)
    std = np.std(signal)
    var = np.var(signal)
    rms = np.sqrt(np.mean(np.square(signal)))
    return [n5, n25, n75, n95, median, mean, std, var, rms]

stat_feat_l0 = [calculate_statistics(x) for x in sensors]
stat_feat_l1 = [calculate_statistics(x) for x in sensors_l1]
```

The Skelness and Kurtosis:

```
skew_l0 = [skew(x, bias=False) for x in sensors]
skew_l1 = [skew(x, bias=False) for x in sensors_l1]
kurtosis_l0 = [kurtosis(x, bias=False) for x in sensors]
kurtosis_l1 = [kurtosis(x, bias=False) for x in sensors_l1]
```

Zero crossing (zcross) is the number of times the wavelet coefficient crosses the zero axis. It can be used to measure the signal's frequency content since high-frequency signals tend to have more zero crossings than low-frequency signals.

Mean crossing (mcross), on the other hand, is the number of times the wavelet coefficient crosses the mean of the signal. It can be used to measure the signal's amplitude since high-amplitude signals tend to have more mean crossings than low-amplitude signals.

```
def getZeroCrossingRate(arr):
    my_array = np.array(arr)
    zcross = float("{0:.2f}".format((((my_array[:-1] * my_array[1:]) < 0).sum())/len(arr)))
    return zcross

def getMeanCrossingRate(arr):
    mcross = getZeroCrossingRate(np.array(arr) - np.mean(arr))
    return mcross

def calculate_crossings(list):
    zcross=[]
    mcross=[]
    for i in range(len(list)):
        zcross_i = getZeroCrossingRate(list[i])
        zcross.append(zcross_i)
        mcross_i = getMeanCrossingRate(list[i])
        mcross.append(mcross_i)
    return zcross, mcross

cross_l0 = calculate_crossings(sensors)
cross_l1 = calculate_crossings(sensors_l1)
```

In wavelet analysis, **entropy** refers to the degree of disorder or randomness in the distribution of wavelet coefficients. Here we used Shannon entropy, which measures a signal's uncertainty or randomness. It is calculated as the negative sum of the probabilities of the different possible outcomes of the signal multiplied by their logarithm base 2. In the context of wavelet analysis,

Shannon entropy can be used to measure the complexity of the signal, with higher values indicating greater complexity.

```
def calculate_entropy(signal, base=None):
    value, counts = np.unique(signal, return_counts=True)
    return entropy(counts, base=base)

entropy_l0 = [calculate_entropy(x) for x in sensors]
entropy_l1 = [calculate_entropy(x) for x in sensors_l1]
```

Let's now list all wavelets features and create a list by layers.

```
L1_features_names = ["L1-n5", "L1-n25", "L1-n75", "L1-n95", "L1-median", "L1-mean",
"L1-std", "L1-var", "L1-rms", "L1-skew", "L1-Kurtosis", "L1-zcross", "L1-mcross",
"L1-entropy"]

L0_features_names = ["L0-n5", "L0-n25", "L0-n75", "L0-n95", "L0-median", "L0-mean",
"L0-std", "L0-var", "L0-rms", "L0-skew", "L0-Kurtosis", "L0-zcross", "L0-mcross",
"L0-entropy"]

all_feat_l0 = []
for i in range(len(axis)):
    feat_l0 =
stat_feat_l0[i]+[skew_l0[i]]+[kurtosis_l0[i]]+[cross_l0[0][i]]+[cross_l0[1][i]]+[en
tropy_l0[i]]
    [print(axis[i]+' '+x+'= ', round(y, 4)) for x,y in zip(L0_features_names,
feat_l0)][0]
    all_feat_l0.append(feat_l0)
all_feat_l0 = [item for sublist in all_feat_l0 for item in sublist]
print(f"\nAll L0 Features = {len(all_feat_l0)}")

all_feat_l1 = []
for i in range(len(axis)):
    feat_l1 =
stat_feat_l1[i]+[skew_l1[i]]+[kurtosis_l1[i]]+[cross_l1[0][i]]+[cross_l1[1][i]]+[en
tropy_l1[i]]
    [print(axis[i]+' '+x+'= ', round(y, 4)) for x,y in zip(L1_features_names,
feat_l1)][0]
    all_feat_l1.append(feat_l1)
all_feat_l1 = [item for sublist in all_feat_l1 for item in sublist]
print(f"\nAll L1 Features = {len(all_feat_l1)}")
```


accX L0-n5= -4.9364	accX L1-n5= -7.3516
accX L0-n25= -1.8429	accX L1-n25= -2.7641
accX L0-n75= 1.8842	accX L1-n75= 2.8462
accX L0-n95= 3.8096	accX L1-n95= 5.0924
accX L0-median= 0.4058	accX L1-median= 0.4064
accX L0-mean= -0.0	accX L1-mean= -0.2133
accX L0-std= 2.7322	accX L1-std= 3.8473
accX L0-var= 7.4651	accX L1-var= 14.8015
accX L0-rms= 2.7322	accX L1-rms= 3.8532
accX L0-skew= -0.099	accX L1-skew= -0.2975
accX L0-Kurtosis= -0.3475	accX L1-Kurtosis= -0.7631
accX L0-zcross= 0.06	accX L1-zcross= 0.06
accX L0-mcross= 0.06	accX L1-mcross= 0.06
accX L0-entropy= 4.8283	accX L1-entropy= 4.1744
accY L0-n5= -1.149	accY L1-n5= -1.3234
accY L0-n25= -0.4475	accY L1-n25= -0.6492
accY L0-n75= 0.4814	accY L1-n75= 0.7844
accY L0-n95= 1.1491	accY L1-n95= 1.361
accY L0-median= -0.0315	accY L1-median= 0.0659
accY L0-mean= 0.0	accY L1-mean= 0.0276
accY L0-std= 0.7833	accY L1-std= 0.9345
accY L0-var= 0.6136	accY L1-var= 0.8732
accY L0-rms= 0.7833	accY L1-rms= 0.9349
accY L0-skew= 0.1756	accY L1-skew= 0.2874
accY L0-Kurtosis= 1.2673	accY L1-Kurtosis= 0.0347
accY L0-zcross= 0.29	accY L1-zcross= 0.31
accY L0-mcross= 0.29	accY L1-mcross= 0.31
accY L0-entropy= 4.8283	accY L1-entropy= 4.1317
accZ L0-n5= -0.1242	accZ L1-n5= -0.1126
accZ L0-n25= -0.0429	accZ L1-n25= -0.0493
accZ L0-n75= 0.0349	accZ L1-n75= 0.0348
accZ L0-n95= 0.0839	accZ L1-n95= 0.1022
accZ L0-median= -0.0112	accZ L1-median= -0.0137
accZ L0-mean= 0.0	accZ L1-mean= 0.0025
accZ L0-std= 0.1383	accZ L1-std= 0.1053
accZ L0-var= 0.0191	accZ L1-var= 0.0111
accZ L0-rms= 0.1383	accZ L1-rms= 0.1053
accZ L0-skew= 6.9463	accZ L1-skew= 4.4095
accZ L0-Kurtosis= 68.1123	accZ L1-Kurtosis= 28.6586
accZ L0-zcross= 0.35	accZ L1-zcross= 0.4
accZ L0-mcross= 0.35	accZ L1-mcross= 0.37
accZ L0-entropy= 4.5649	accZ L1-entropy= 4.1531
All L0 Features = 42	All L1 Features = 42

Conclusion

Edge Impulse Studio is a powerful online platform that can handle the pre-processing task for us. Still, as engineers are capital, we understand what is happening under the hood. This knowledge will help us to find the best options and/or hyper-parameters for tuning our projects.

Daniel Situnayake wrote in his [blog](#): "Raw sensor data is highly dimensional and noisy. Digital signal processing algorithms help us sift the signal from the noise. DSP is an incredibly important part of embedded engineering, and

many edge processors have on-board acceleration for DSP. As an ML engineer, learning basic DSP gives you superpowers for handling high frequency time series data in your models." (I recommend you read Dan's excellent post in its totality [nn to cpp: What you need to know about porting deep learning models to the edge](#)).

Knowing more

If you want to learn more about Embedded Machine Learning (TinyML), please see these references:

- ["TinyML - Machine Learning for Embedding Devices"](#) - UNIFEI
- ["Professional Certificate in Tiny Machine Learning \(TinyML\)"](#) – edX/Harvard
- ["Introduction to Embedded Machine Learning"](#) - Coursera/Edge Impulse
- ["Computer Vision with Embedded Machine Learning"](#) - Coursera/Edge Impulse
- ["Deep Learning with Python"](#) by François Chollet
- ["TinyML"](#) by Pete Warden, Daniel Situnayake
- ["TinyML Cookbook"](#) by Gian Marco Iodice
- ["AI at the Edge"](#) book by Daniel Situnayake, Jenny Plunkett

On the [TinyML4D website](#), You can find lots of educational materials on TinyML. They are all free and open-source for educational uses – we ask that if you use the material, please cite them! TinyML4D is an initiative to make TinyML education available to everyone globally.